

If you have any comments or concerns,
please feel free to contact our
customer service department at:
Toll-free: 1-800-835-0438
OR
Email: info@gofia.com

SEAT COVERS
BY



FEATURING
SUPER-GRIP® THE SLIP RESISTANT FASTENING SYSTEM

**INSTALLATION INSTRUCTIONS
FOR
TR48-32**

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

A) BACKREST COVER

 
- | | |
|--|--------------------------------------|
| 1) Remove headrests. (see note below) | 4) Adjust velcro to equalize tension |
| 2) Slip cover over backrest and pull down firmly (see
airbag warning below) | 5) Replace headrest (see note below) |
| 3) Tuck flaps under backrest and attach to velcro at
back | |

B) CUSHION COVER

- | | |
|--|---|
| 1) Move seat to most forward and uppermost position | 5) Pass long side strap through the opening between
the seat and the molded plastic and under the seat |
| 2) Place cover on seat cushion ensuring long side strap
is on the door side | 6) Buckle to the other side |
| 3) Pass back flap of cover with straps through crevice | 7) Adjust straps to equalize to equalize tension |
| 4) Feed straps under seat and buckle to front of
cushion cover | |

NOTES:

1) SELF-LOCKING SUPER-GRIP® BUCKLE:

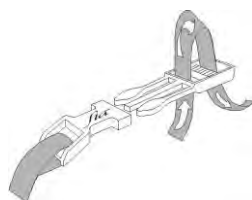


3) RE-INSTALLATION OF HEADRESTS

- A) Ensure pre-cut holes in seat cover align with holes
in headrest base.
B) Replace headrests

2) HEAD REST REMOVAL:

 Push in side release buttons
- Lift off
(If unable to remove
consult dealership)

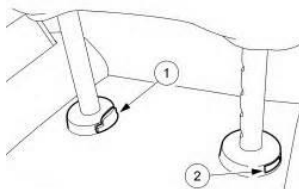

WARNING: DO NOT BLOCK AIR BAGS

WHEN INSTALLING SEAT COVERS:

- 1) Seats with integrated seat airbags must be covered only with seat covers designed with openings. Make sure that the openings in the sides of the seat covers are positioned so that the seat covers do not block or interfere with the deployment of the air bag. The attached flap tucks inside the cutout and should be able to open freely in case of deployment.
- 2) Constantly check your seat covers to ensure they are properly positioned to allow for complete air bag deployment.

LIMITATION LIABILITY: The manufacturer shall not be liable for any damages or for the breach of any warranty, express or implied, whether of merchantability or fitness for any purpose or otherwise, or for any other obligation or liability arising out of the installation of the seat covers or the movement of the seat covers after installation.



Fia Inc. Winnipeg, Canada R3L 0N3 Telephone (204) 475-0515 Toll-Free: 1-800-835-0438
Fax: (204) 284-8246 E-Mail: info@gofia.com Website: www.gofia.com

09-04-13